
 


Select all Beam Systems by Roof/Floor or Rafter/Beam




 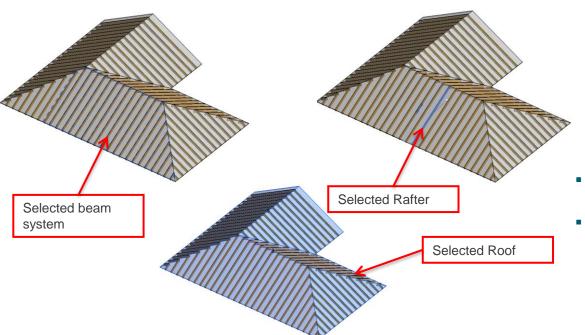


 
- Select Roof/Floor, any type of a beam system or single Rafter/Beam.
- Choose Select Beam Systems by Roof/Floor or Rafter/Beam from the menu.



Select all Beam Systems by Roof/Floor or Rafter/Beam

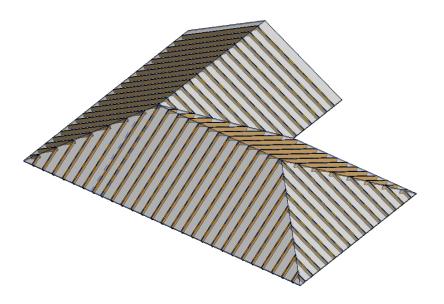











Select Beam System(s) by Rafter(s) or Beam(s)

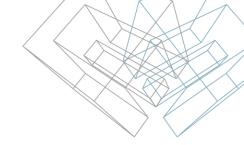


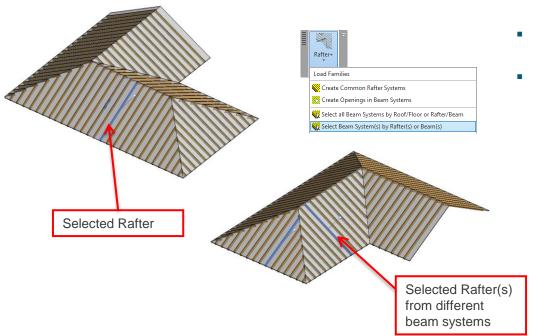


- Select single Rafter/Beam or multiple Rafter(s)/Beam(s) from different beam systems.
- Choose command Select Beam System(s) by Rafter(s) or Beam(s).



Select Beam System(s) by Rafter(s) or Beam(s)

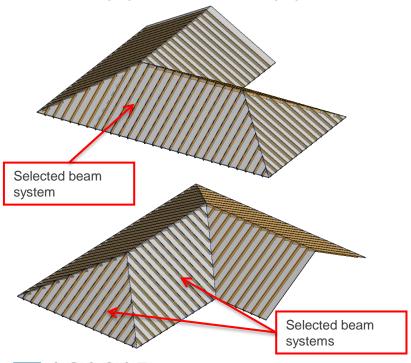


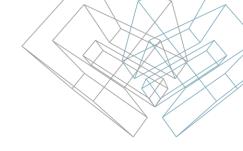


 Now you can see that beam systems are selected according your previous selections.




Beam Systems by Rafter from the Same Slope

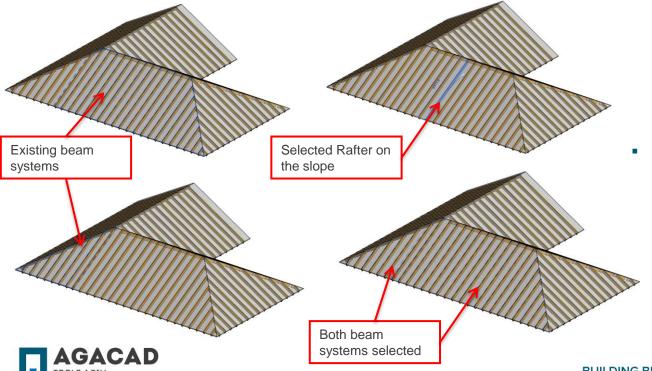

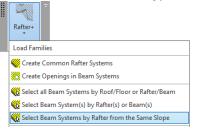

If you have multiple beam systems on one slope, you can select all of them by selecting one Rafter from the slope and choosing command – Select Beam Systems by Rafter from the Same Slope

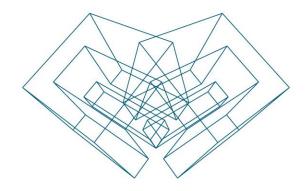

AGA CAD Ltd

T: +370 618 55671 | E: support@aga-cad.com | W: www.aga-cad.com