

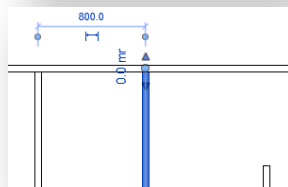
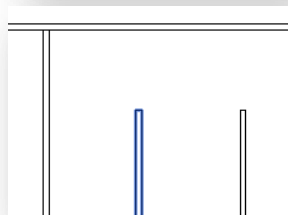


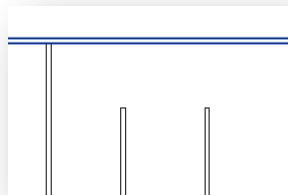



# WOOD FRAMING RAFTER+ Extend Beam

# Extend Beam

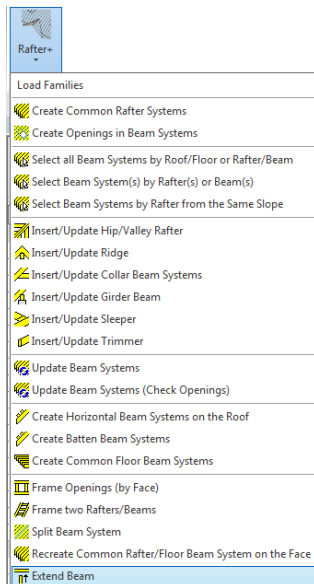

- To extend one beam to other beam, use the command **Extend Beam**.
- Select Boundary beam.
- Select Beam you want to extend.
- Beam is extended to the boundary beam.

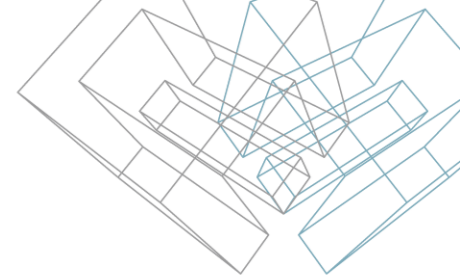

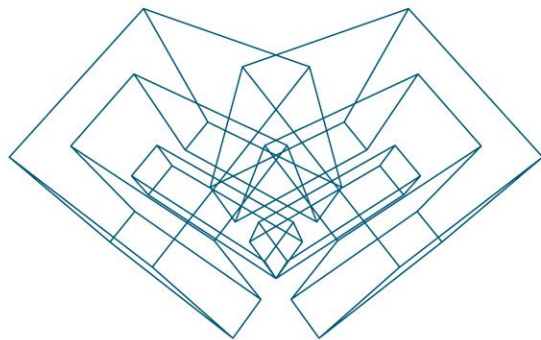

AGA CAD Ltd

T: +370 618 55671 | E: [support@aga-cad.com](mailto:support@aga-cad.com) | W: [www.aga-cad.com](http://www.aga-cad.com)